


Socket Set

Part # 142-800

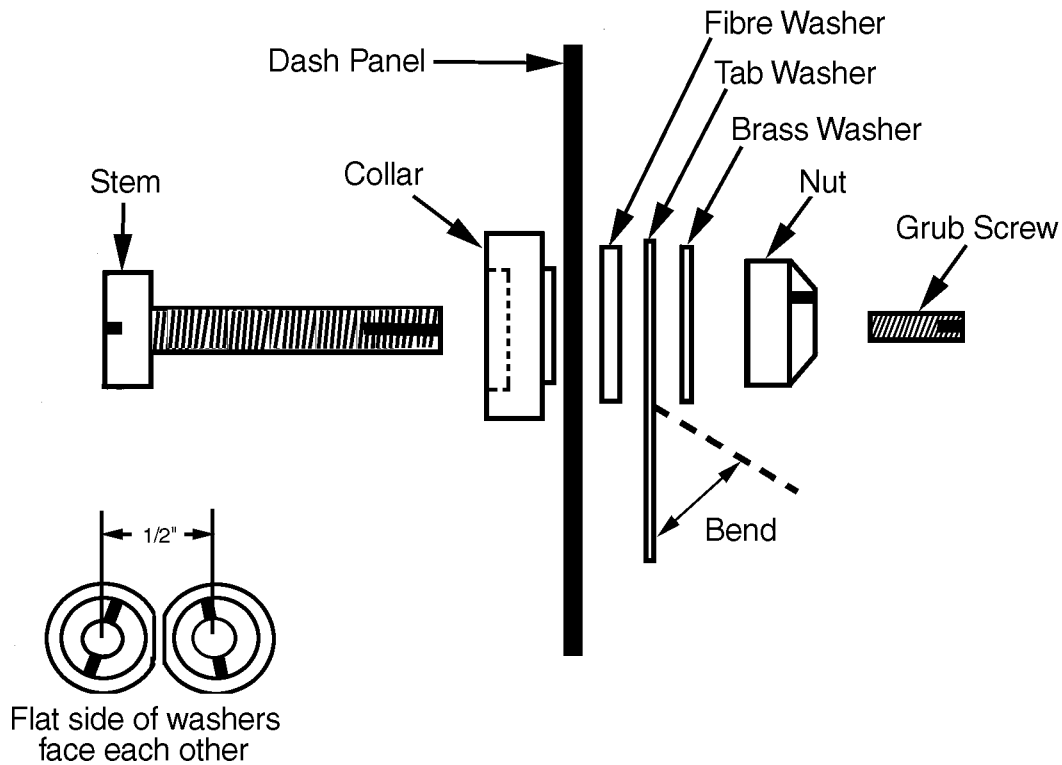

- 1) Insert colored collar over stem.
- 2) Insert stem through dash panel.
- 3) Place fiber washer, insulating tab, and brass washer over stem.
- 4) Strip wire insulation about 1/8" from end, and insert in slot on stem then tighten grub screw. Bend black tab washer.
- 5) Use second nut to apply a loop connector, should you need an additional hot or ground wire.



MOSS MOTORS, LTD.

P.O. Box 847 440 Rutherford Street Goleta, California 93117 (800)235-6954 FAX (805)692-2525

Instruction sheet #980-187 05/01