


Installation Instructions

# Stone Guard Set

Part # 222-100

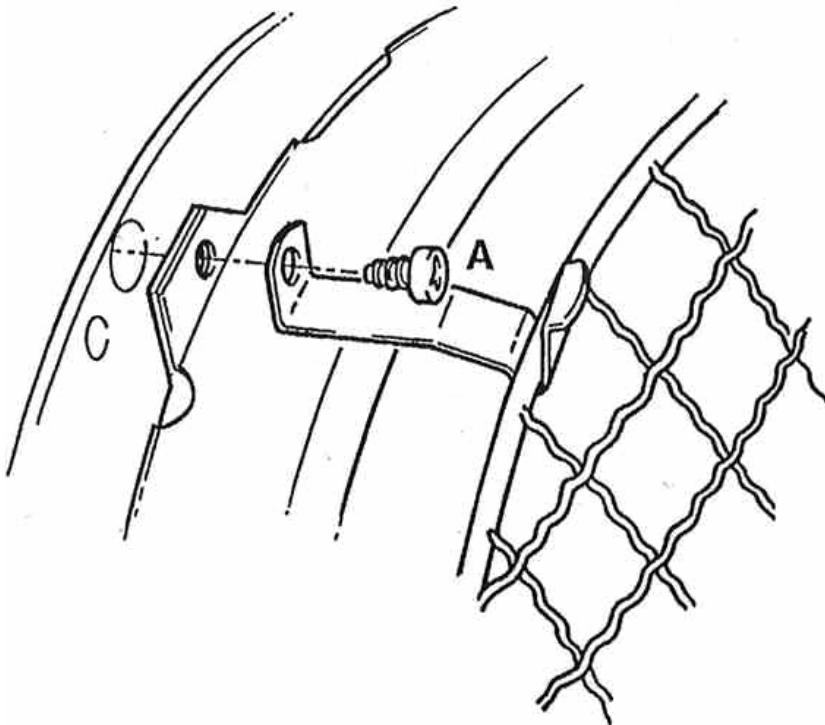

1. Remove outer rim.
2. Locate the three inner rim retaining screws (A).
3. Remove retaining screws one at a time and install the provided clips with the tab facing up as shown.
4. Replace outer rim.
5. Snap stone guard over retaining clips



**Moss Motors, LTD**  
440 Rutherford Street  
Goleta, CA 93117  
805-681-3400 Fax (805-692-2510)