



**Supplemental Information & Instructions**  
**for**  
**408-001 Badge Mount Kit, Rubber Lined, for 1" Badge Bar (this page)**  
*(for 408-002 Badge Mount Kit for 3/4" Badge Bar see page 2)*

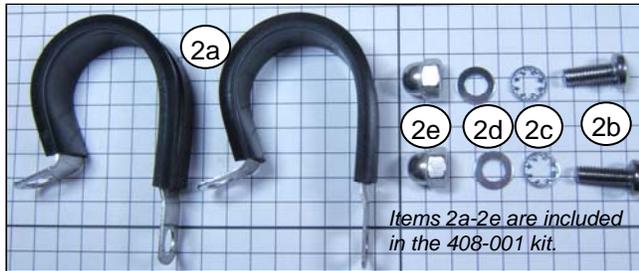

*Items 2a-2e are included in the 408-001 kit.*

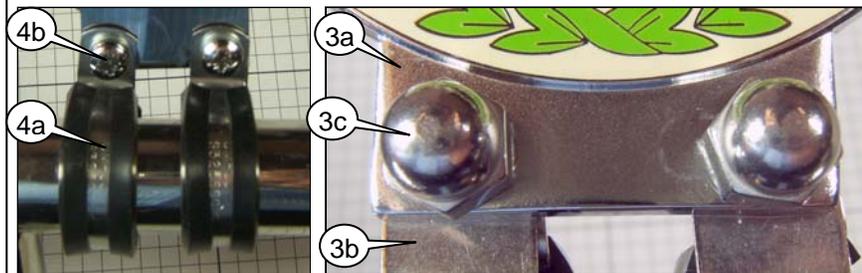

As of November 2011, Moss does not offer any 1" diameter badge bars, but our reproduction of the AMCO TR6 "Grille Guard" 856-880 and "Tail-lamp Guard" 856-885 are made from 1 inch tubing, and many people have asked how they could mount badges on the front bar- a common practice back in the '70's when AMCO introduced the "Guards". We came up with this kit, which is suitable for any 1" diameter badge bar.

Fig 1	408-001	Badge Mount Kit, Rubber Lined, 1"	1
		<i>Consisting of</i>	
2a	408-557	Modern Rubber Lined Stainless Steel Badge Mounting Clip	2
2b	472-535	Chrome Pan Head Screw	2
2c	324-110	Internal Tooth Lock Washer, zinc plated	2
2d	315-085	Flat Washer, zinc plated	2
2e	311-045	Chrome Dome Nut	2

**Installation Tips**

If you wrap tape around the jaws of a pair of pliers or vice grips, you can clamp the p-clip and the badge together while you install the screws, washers and dome nuts. The internal toothed washer (2c) goes on the screw first, then the flat washer. Use a 3/8" socket or wrench on the dome nuts (2e) while tightening the screws with a Phillips head screw driver. (The screws (2b,4b) are actually Pozi-drive but many people do not have Pozi-drive screw drivers.) Note that the badge (3a) is mounted on *top* or *in front* of the pinched-together clip (3b), and the dome nut (3c) sits directly on top of the badge. Notice the orientation of the p-clip (4a), which is positioned as shown to position the badge at the front edge of the bar. By tightening the screw (4b) instead of the nut, the damage to the plated surface of the badge is minimized. The use of the rubber lined clamps provides maximum grip for any short term (or long term) badge or "Ralley Plate" installation while protecting the polished chrome or stainless steel bar from scuff marks and scratches.

*(for 408-002 Badge Mount Kit for 3/4" Badge Bar see page 2)*

### 408-002 Badge Mount Kit, Traditional Metal Clip, for 3/4" Badge Bar



Ref	Part#	Description	Qty
Fig 6	408-002	Badge Mount Kit, Traditional Metal Clip, 3/4"	1
		<b>Consisting of</b>	
7a	408-467	Traditional Design Stainless Steel Badge Mounting Clip	1
7b	472-535	Chrome Pan Head Screw	2
7c	324-110	Internal Tooth Lock Washer, zinc plated	2
7d	315-085	Flat Washer, zinc plated	2
7e	311-045	Chrome Dome Nut	2

#### Installation Tips

If you wrap tape around the jaws of a pair of pliers or vice grips (8a), you can clamp the clip and the badge together while you install the screws, washers and dome nuts. The internal toothed washer (7c) goes on the screw first, then the flat washer. Push the screw (9a) through the clip from the back side so the threaded end pokes through the hole in the front of the badge. Use a 3/8" socket or wrench on the dome nuts (9b) while tightening the screws with a Phillips head screw driver (10a). The screws are actually Pozi-drive but many people do not have Pozi-drive screw drivers. Note that the badge is mounted *in front* of the pinched-together clip, and the dome nut (9b) sits directly on top of the badge. By tightening the screw instead of the nut, the damage to the plated surface of the badge is minimized.

*Although every effort has been made to ensure the accuracy and clarity of this information, any suggestions that you may have that will improve the information (especially detailed installation notes) are welcome. Please use the simple email form on the "Contact Us" page on the Moss website: <http://www.mossmotors.com/AboutMoss/ContactUs.aspx> If you prefer, you may call our Technical Services Department at 805-681-3411. So many people call us for help that we are often not able to answer the calls as fast as we'd like, and you may be asked to leave a message. We apologize in advance for the inconvenience. We will get back to you within 2 business days.*



#### Moss Motors, Ltd.

440 Rutherford Street, Goleta, California 93117  
 In the US & Canada Toll Free (800) 667-7872 FAX (805) 692-2510 (805) 681-3400

#### Moss Europe Ltd.

Hampton Farm Industrial Estate, Hampton Road West, Hanworth Middlesex, TW13 6DB  
 In the UK: 020-8867-2020 FAX:- 020-8867-2030