




Carpet Set

PART# 449-320, 454-448, 454-449

Installation Instructions For: MG TC

440 Rutherford St. Goleta, CA 93117
1-800-667-7872 • FAX 805-692-2525 • www.MossMotors.com

These Moss made carpet sets are manufactured to completely original specifications and incorporate original style material. TC transmission tunnels were not originally carpeted, nor were any original carpet sections bound. The small piece of carpet included with these sets should be glued to the right hand side of the transmission cover and act as a scuff pad for the clutch pedal.

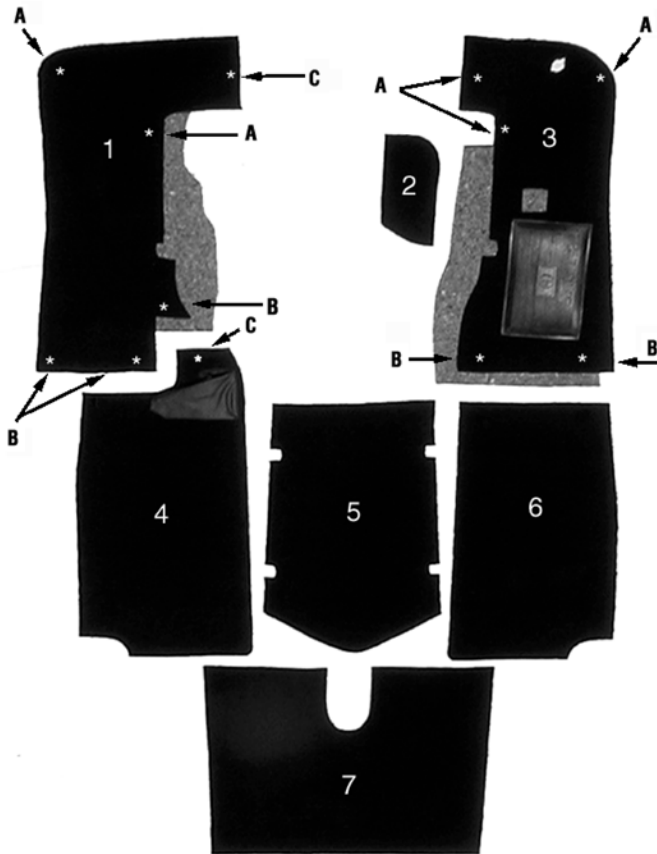

- * Snap location
- A Lift the Dot
- B Veltex
- C Hole

Ref	Description
1	Left Hand (LH) Floor Mat
2	Scuff Panel
3	Right Hand (RH) Floor Mat
4	Left Hand (LH) Underseat
5	Driveshaft Cover
6	Right Hand (RH) Underseat
7	Rear Bulkhead

Notes:

- Driveshaft Cover (#5) should be installed prior to floorboards.
- LH Floor Mat (#1) overlaps Underseat (#4), and RH Floor Mat (#3) overlaps RH Underseat (#6).
- Rear Bulkhead (#7) was not fitted from factory.
- Snap Set #227-008, contains both "Lift the Dot" and "Veltex" fasteners, and is included with the kit.

Designed and Distributed by Moss Motors, Ltd.

For questions or comments please contact:

Moss Motors, Ltd.
440 Rutherford Street, Goleta, California 93117
In the US & Canada Toll Free (800) 667-7872
LOCAL (805) 681-3400 FAX (805) 692-2510



Moss Europe Ltd.
Unit 16 Hampton Business Park Bolney Way
Feltham TW13 6DB, United Kingdom
In the UK: 020-8867-2020 FAX: 020-8867-2030