




456-448 Side Curtain Compartment

Installation Instructions

MG TC

440 Rutherford St. Goleta, CA 93117
1-800-667-7872 • FAX 805-692-2525 • www.MossMotors.com

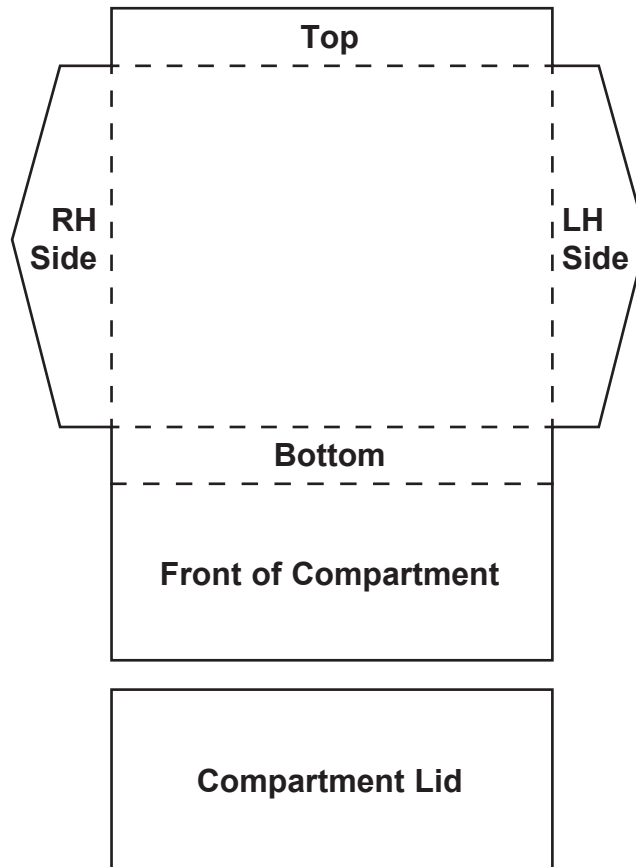

Installation Tips:

Because of the variations from one car to another, we have not cut the material to the exact size, nor have we included exact dimensions. This diagram should only be used as a guide to ensure a neat installation. Sufficient material is included if installed accordingly. The dotted lines indicate a fold in the material, while solid lines indicate that trimming is required. An additional spray adhesive is recommended for gluing as such an adhesive will not saturate the felt.

Although every effort has been made to ensure the accuracy and clarity of this information, any suggestions that you may have that will improve the information (especially detailed installation notes and photos) are welcome. These instructions were developed and written by Moss Technical Support. If you have any questions or difficulties with your installation of this product, telephone 800-667-7872 between 7:00 a.m. and 4:00 p.m., Pacific Time for assistance.

Moss Motors, Ltd.
440 Rutherford Street, Goleta, California 93117
In the US & Canada Toll Free (800) 667-7872
LOCAL (805) 681-3400 FAX (805) 692-2510



Moss Europe Ltd.
Hampton Farm Industrial Estate
Hampton Road West, Hanworth Middlesex, TW13 6DB
In the UK: 020-8867-2020 FAX:- 020-8867-2030