



Seat Webbing Installation Instructions MGB & MIDGET 1970-1980

PART#: 641-990 & 281-858

440 Rutherford St. Goleta, CA 93117
1-800-642-8295 • FAX 805-692-2525 • www.MossMotors.com

Figures may vary from actual parts.

Contents of the Kit:

- 1 Seat Web Assembly
- 12 Hooks
- 2 Rods

2. Start at the rear of the seat frame. Insert the two rods into the rear strap loops of the seat web assembly and attach the hook onto it as shown (Figure 2b).

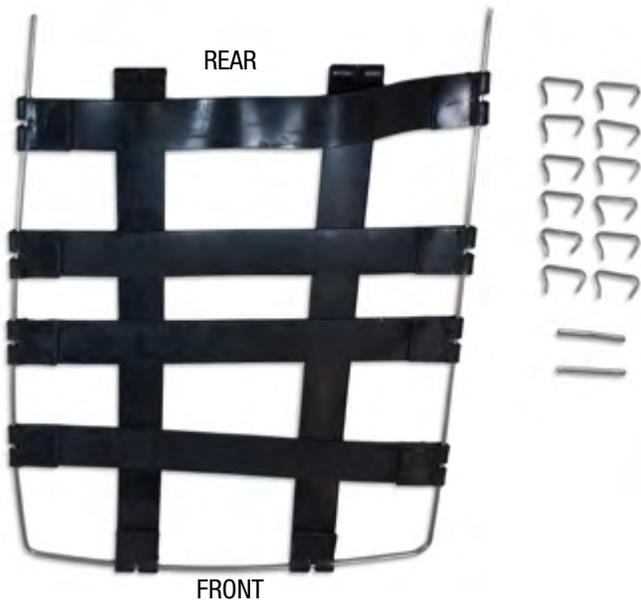


Figure 2a

Installation

1. Orient hooks as shown (Figure 1).

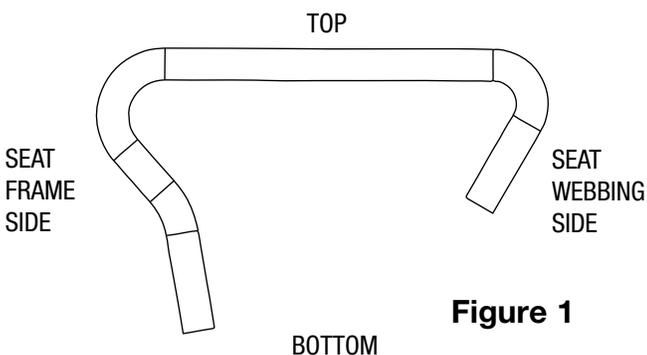



Figure 1




Figure 2b

Installation Instructions

3. Insert the rear hooks into the holes in the rear of the seat frame. Install hooks in the front two straps. Stretch the straps forward and insert the front hooks into the holes in the front of the seat frame.

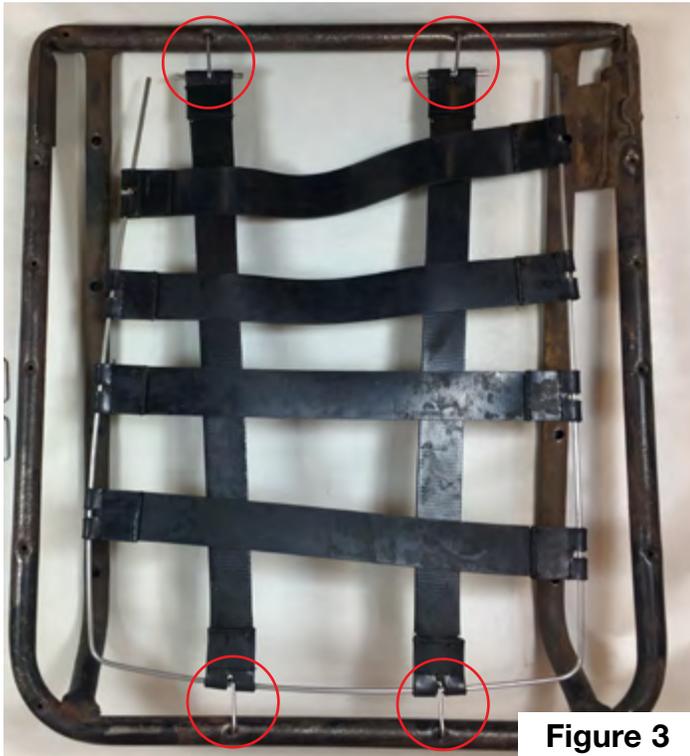

4. Install a hook on each of the side straps. Attach each strap into the holes on the side of the seat frame, one strap at a time.

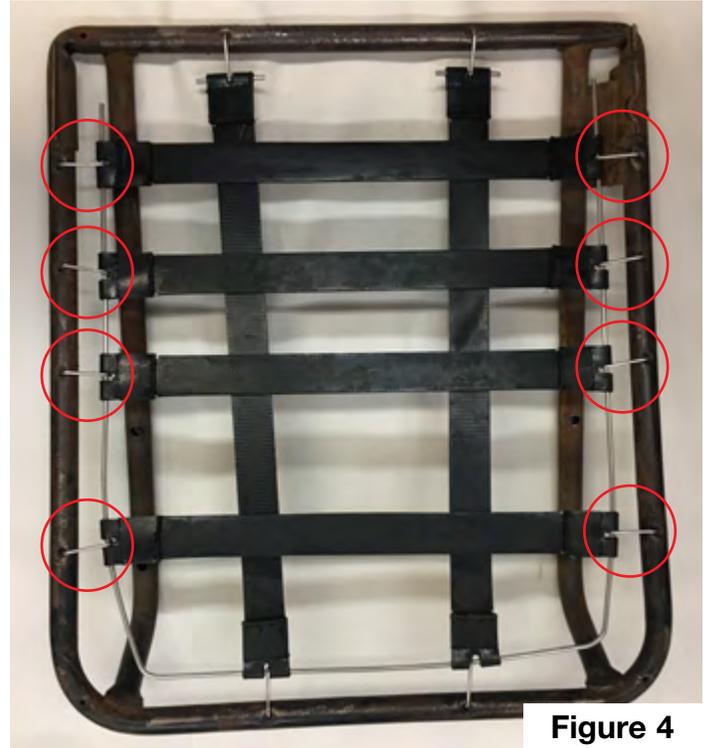

Although every effort has been made to ensure the accuracy and clarity of this information, any suggestions that you may have that will improve the information (especially detailed installation notes and photos) are welcome. These instructions were developed and written by Moss Technical Support. If you have any questions or difficulties with your installation of this product, telephone 800-667-7872 between 7:00 a.m. and 4:00 p.m., Pacific Time for assistance.

Moss Motors, Ltd.
440 Rutherford Street, Goleta, California 93117
In the US & Canada Toll Free (800) 667-7872
LOCAL (805) 681-3400 FAX (805) 692-2510



Moss Europe Ltd.
Hampton Farm Industrial Estate
Hampton Road West, Hanworth Middlesex, TW13 6DB
In the UK: 020-8867-2020 FAX: 020-8867-2030