



Corbeau Seat Adapter Brackets

PART# 646-411

Installation Instructions For: MGB

440 Rutherford St. Goleta, CA 93117
1-800-667-7872 • FAX 805-692-2525 • www.MossMotors.com

Tools Required:

- Phillips Head Screwdriver
- $\frac{7}{16}$ Wrench
- Pencil Magnet or Pocket Screwdriver with Magnet

Instructions

1. Remove your old seat from the car. Remove the wooden packing strip and small aluminum spacers if equipped. They will not be used for installation of these adapter brackets. Install the Corbeau seat rails to the seat (if not already done).
2. Place your Corbeau seat upside-down and prepare to install the seat adapter brackets onto the seat rails. The tapered, flat head screws will be installed in the outer holes in each seat rail. The brackets will be installed so that the tabs are facing out.



Figure 2a

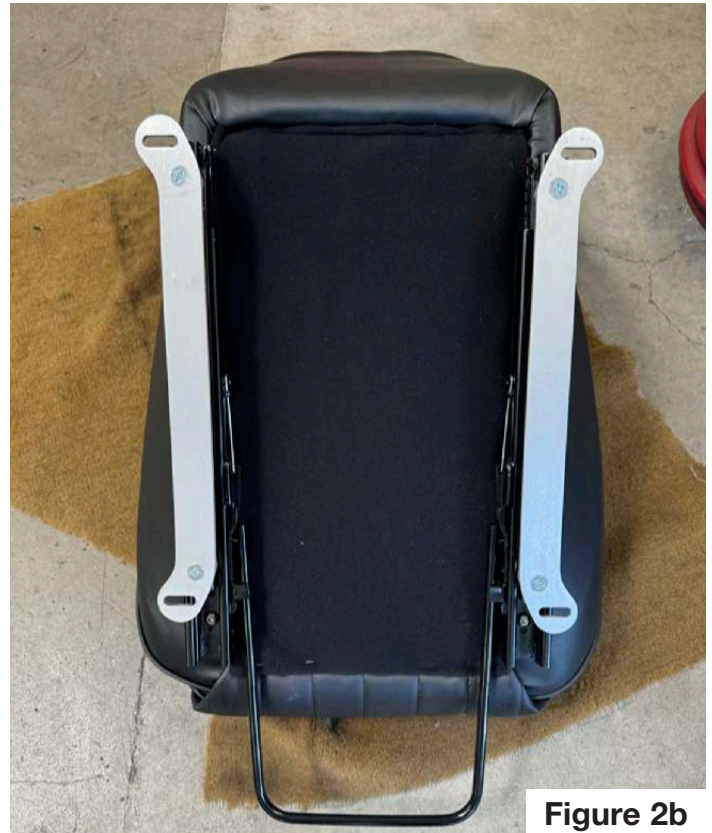


Figure 2b

Installation Instructions

3. Place the tapered flat-head screw into the counter-sunk hole on the adapter bracket. Place one of the included $\frac{3}{4}$ " spacers on each bolt in between the adapter bracket and the Corbeau seat rail. Hold the nut in place under the seat rail with a magnet as you start the threads into the nut. Tighten the Phillips head screws to install the adapter bracket to your Corbeau Seat Rail.



Figure 3a



Figure 3b


4. Install the seat into the vehicle using the provided bolts, lock washers, and flat washers. You may need to move your seat rails individually as necessary to line up with the mounting holes on your car. Install all the bolts finger tight, and then fine-tune the position of your seat to your liking before the final tightening. Make sure your seat is clear of your convertible top frame, and also free to move fore and aft as you see fit.



Figure 4

5. Enjoy the Corbeau seat in your MGB!

Bill of Materials

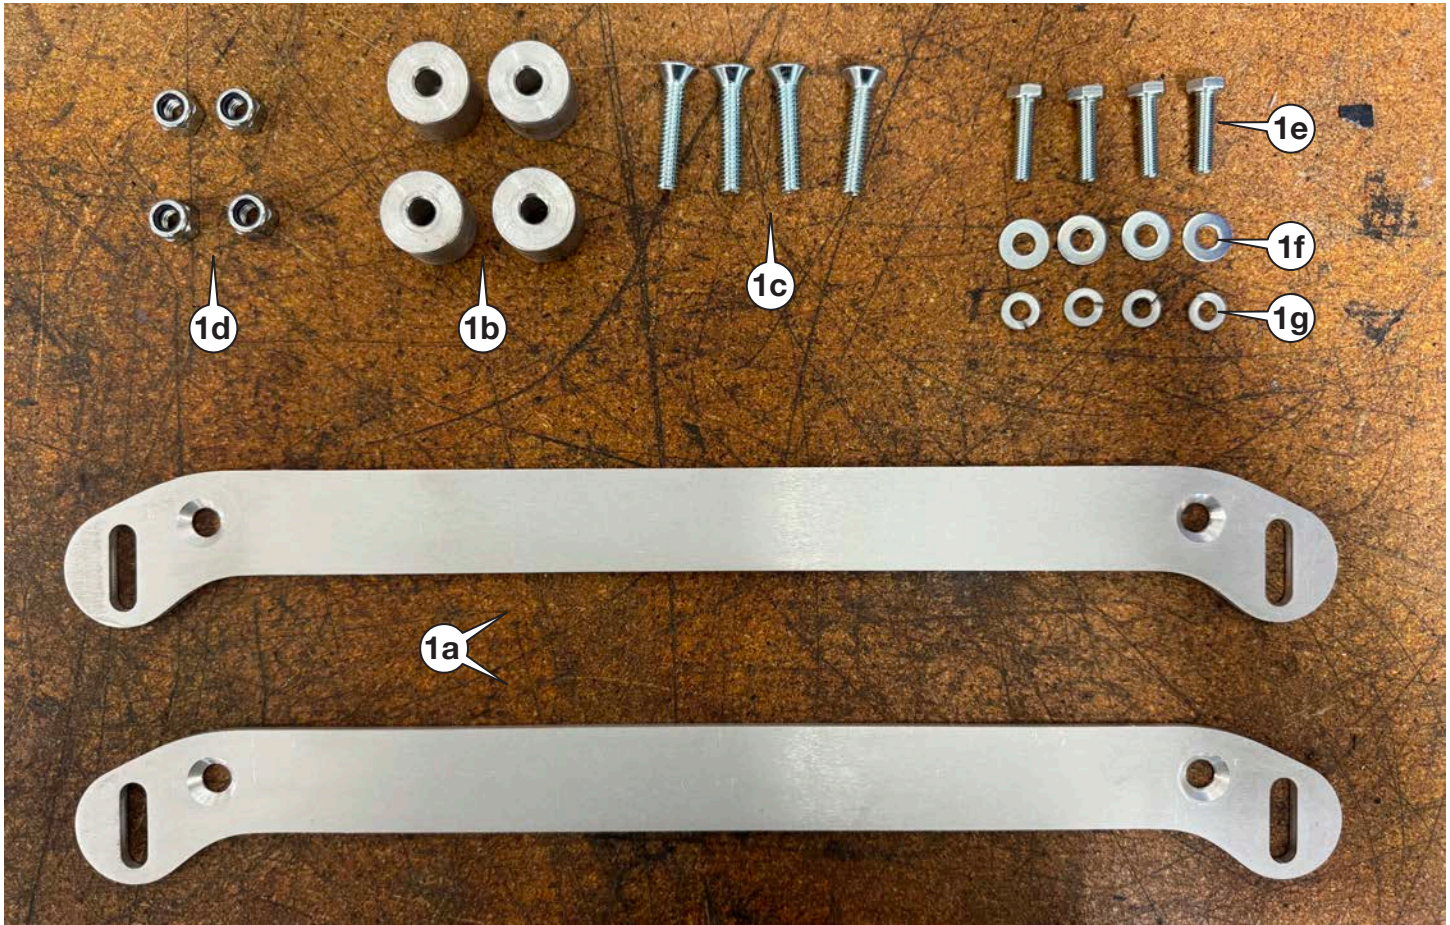

Ref	Part #	QTY	Description
1a	773-099	2	ADAPTER BRACKET, CORBEAU SEAT, MGB
1b	773-097	4	SPACER, ALUMINUM, FOR $\frac{5}{16}$ BOLT, $\frac{3}{4}$ LONG, $\frac{3}{4}$ OD
1c	773-098	4	SCREW, FLAT HEAD, CSK, $\frac{5}{16}$ X 1.5 LONG, UNC
1d	771-530	4	NUT, NYLOC, $\frac{5}{16}$ UNC
1e	322-247	4	BOLT, HEX, $\frac{1}{4}$ -28 X 1 IN.
1f	324-590	4	WASHER, FLAT, $\frac{1}{4}$ ID, ZINC
1g	324-020	4	WASHER, LOCK, $\frac{1}{4}$ IN

Designed and Distributed by Moss Motors, Ltd.

For questions or comments please contact:

Moss Motors, Ltd.
 440 Rutherford Street, Goleta, California 93117
 In the US & Canada Toll Free (800) 667-7872
 LOCAL (805) 681-3400 FAX (805) 692-2510



Moss Europe Ltd.
 Unit 16 Hampton Business Park Bolney Way
 Feltham TW13 6DB, United Kingdom
 In the UK: 020-8867-2020 FAX: 020-8867-2030