



Grommet & Supporting Plate Kit

Installation Instructions

Austin Healey 3000

PART # 680-288


440 Rutherford St. Goleta, CA 93117

1-800-667-7872 • FAX 805-692-2525 • www.MossMotors.com

Contents of Kit

1a PTZ803	Mounting Screws	(6)
1b AAA1891	Supporting Plate	(2)
1c BHA4281	Grommet, Battery Cable	(2)

Figure 1

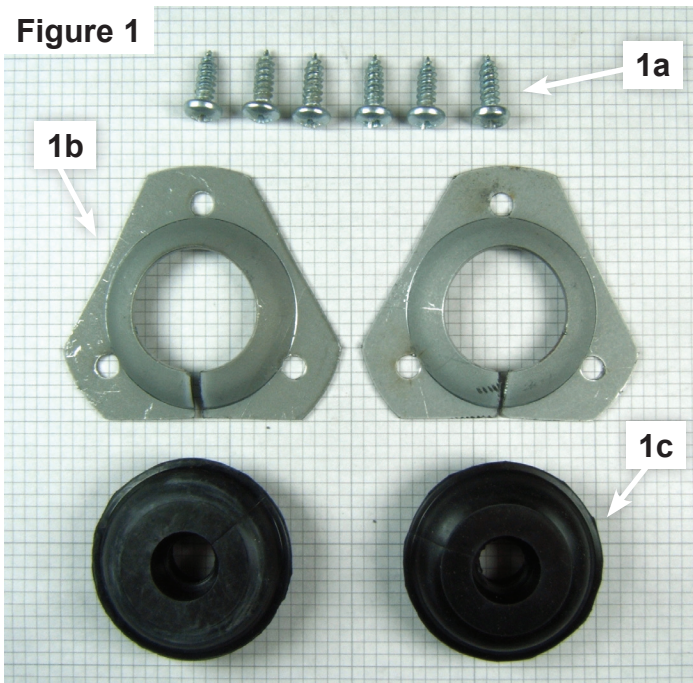

Installation Tips

The battery cable attached to the forward terminal on the battery passes through two steel bulkheads in the trunk.

The first (2a) is the fuel filler neck bulkhead, and the second (2b) is the forward bulkhead of the trunk compartment. The grommets (1c) are the late style and they fit part way through the steel panel. The supporting

plates (each secured with 3 sheet metal screws) keep the grommet in place. When the fuel filler closeout panel (3a) and the Armacord is replaced (3b), the grommets and supporting plates are completely hidden. Sliding the grommets and plates over the cable is much easier if the terminals are removed. (Fig 3)



Figure 2

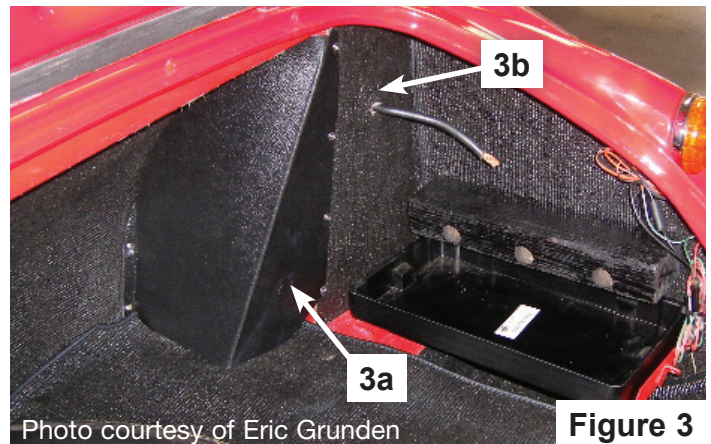


Photo courtesy of Eric Grunden

Figure 3

Although every effort has been made to ensure the accuracy and clarity of this information, any suggestions that you may have that will improve the information (especially detailed installation notes and photos) are welcome. These instructions were developed and written by Moss Technical Support. If you have any questions or difficulties with your installation of this product, telephone 800-667-7872 between 7:00 a.m. and 4:00 p.m., Pacific Time for assistance.

Moss Motors, Ltd.

440 Rutherford Street, Goleta, California 93117
In the US & Canada Toll Free (800) 667-7872
LOCAL (805) 681-3400 FAX (805) 692-2510



Moss Europe Ltd.

Hampton Farm Industrial Estate
Hampton Road West, Hanworth Middlesex, TW13 6DB
In the UK: 020-8867-2020 FAX:- 020-8867-2030