


Instructions for #821-350 Rocker Oil Feed Kit

Contents:

- 1 Feed Pipe with banjo ends
- 2 Banjo Bolts (#821-370)
- 4 Copper Compression Washers (#821-365)

1. Remove the small bolt and washer "A" from the left hand rear corner of the cylinder head. This is the blanking plug for the horizontal oil passage to the rocker pedestal.
2. Remove the bolt and washer "B" from the main oil gallery just in front of and below the fuel pump. Replace with a banjo bolt, oil pipe banjo, and 2 copper washers. Connect the other end of the oil pipe to the cylinder head with the remaining banjo bolt and washers, ensuring that the oil pipe runs smoothly between the attachment points.
3. Carefully tighten the banjo bolts with just enough pressure to compress the copper washers.

DO NOT OVER-TIGHTEN!

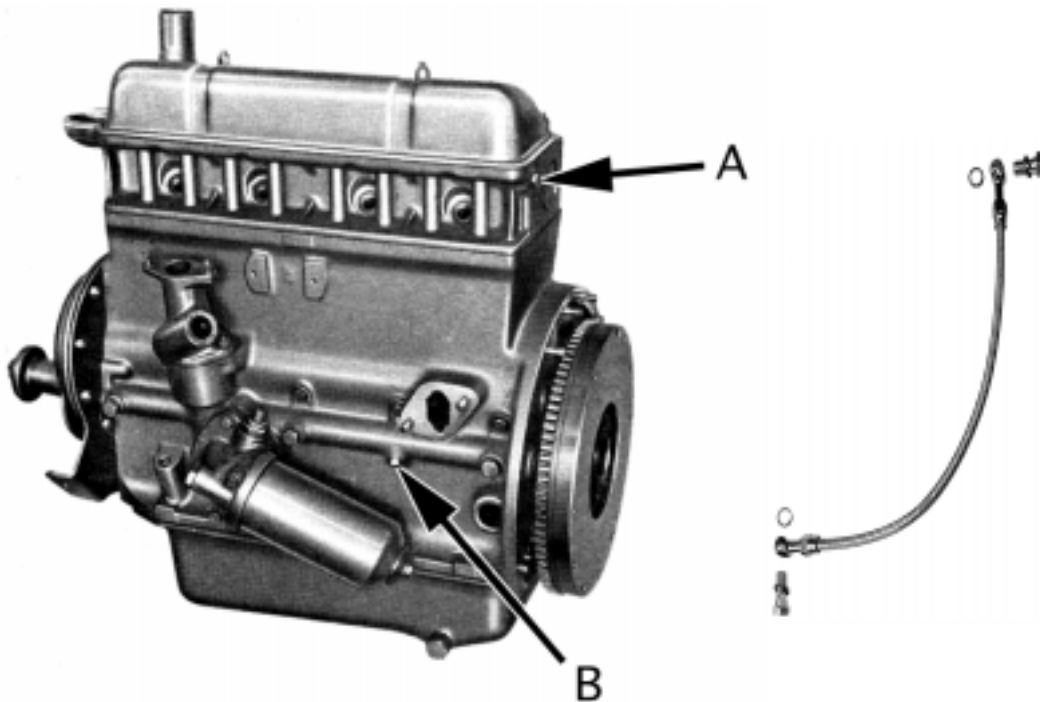

MOSS MOTORS, LTD.

P.O. Box 847 440 Rutherford Street Goleta, California 93117 (800)235-6954 FAX (805)692-2525

Instruction sheet #980-008 5/00